

# ALPHABETICAL INDEX

SECTION **IDX**

## ALPHABETICAL INDEX

### A

A/C HFC134a (R134a) system precaution . HA-2  
A/C HFC134a (R134a) system service  
    procedure ..... HA-78  
A/C HFC134a (R134a) system service  
    tools ..... HA-11  
A/C HFC134a system service equip-  
    ment precaution ..... HA-6  
A/C air flow ..... HA-20  
A/C component layout ..... HA-18  
A/C compressor clutch removal and  
    installation ..... HA-83  
A/C compressor precaution ..... HA-5  
A/C compressor special service tool ..... HA-9  
A/C control linkage adjustment  
    (manual A/C) ..... HA-41  
A/C control operation (manual A/C) ..... HA-19  
A/C diagnostic work flow  
    (manual A/C) ..... HA-33  
A/C harness layout (manual A/C) ..... HA-22  
A/C lubricant (R134a) ..... HA-80  
A/C operational check ..... HA-34  
A/C performance chart ..... HA-71  
A/C performance test diagnoses ..... HA-69  
A/C relay ..... HA-66  
A/C service data specification ..... HA-97  
A/C switch ..... HA-67  
A/C, M - Wiring diagram ..... HA-27  
A/CCUT - Wiring diagram ..... EC-830  
A/T - Wiring diagram - AT - 1ST ..... AT-207  
A/T - Wiring diagram - AT - 2ND ..... AT-214  
A/T - Wiring diagram - AT - 3RD ..... AT-220  
A/T - Wiring diagram - AT - 4TH ..... AT-227  
A/T - Wiring diagram - AT - BA/FTS ..... AT-167,  
    276  
A/T - Wiring diagram - AT - ENG SS ..... AT-173,  
    201  
A/T - Wiring diagram - AT - FTS ..... AT-191  
A/T - Wiring diagram - AT - LPSV ... AT-178, 241  
A/T - Wiring diagram - AT - MAIN ..... AT-123  
A/T - Wiring diagram - AT -  
    NONDTC ..... AT-292  
A/T - Wiring diagram - AT -  
    OVRCSV ..... AT-155, 270  
A/T - Wiring diagram - AT - PNP/SW ..... AT-185  
A/T - Wiring diagram - AT - SSV/A .. AT-144, 248  
A/T - Wiring diagram - AT - SSV/B .. AT-150, 254  
A/T - Wiring diagram - AT - TCV ..... AT-161, 235  
A/T - Wiring diagram - AT - TPS ..... AT-136, 261  
A/T - Wiring diagram - AT - VSS/AT ..... AT-128,  
    197  
A/T - Wiring diagram - AT -  
    VSSMTR ..... AT-132, 283  
A/T IND - Wiring diagram ..... EL-195  
A/T control ..... EC-532  
A/T diagnosis communication line ..... EC-434  
A/T fluid temperature sensor ..... AT-194

A/T shift lock system - Wiring  
    diagram ..... AT-344  
A/T shift lock system ..... AT-343  
A/T trouble diagnoses ..... AT-69, 74  
AAC/V - Wiring diagram ..... EC-378, 513  
ABS (anti-lock brake system) ..... BR-49  
ABS - Wiring diagram ..... BR-54  
ABS sensor rotor ..... AX-24  
APS - Wiring diagram ..... EC-685  
ATDIAG - Wiring diagram ..... EC-435, 533  
Accelerator control system ..... FE-3, 19  
Accelerator position sensor ..... EC-685  
Air bag disposal ..... RS-40  
Air bag precautions ..... GI-3  
Air bag ..... RS-20  
Air bleeding (hydraulic clutch) ..... CL-10  
Air bleeding for brake system ..... BR-9  
Air conditioner cut control ..... EC-35, 612  
Air flow meter - See Mass air flow  
    sensor ..... EC-187, 673  
Air mix door control linkage  
    adjustment ..... HA-43  
Air spoiler, rear ..... BT-47  
Alternator ..... SC-31  
Angular tightening application ..... EM-4, 77  
Antenna - See Power antenna ..... EL-282  
Anti-lock brake system - Wiring  
    diagram ..... BR-54  
Audio and A/C control removal and  
    installation - See Instrument panel ..... BT-25  
Audio ..... EL-258  
Automatic transaxle number ..... GI-41  
Auxiliary air control (AAC) valve ..... EC-376, 511

### B

Back-up lamp switch (M/T) ..... MT-21  
Back-up lamp ..... EL-87  
Ball joint (front) ..... SU-13  
Basic inspection ..... EC-100, 128, 641  
Battery ..... SC-3  
Baulk ring (M/T) ..... MT-31, 55, 93  
Blower motor ..... HA-54  
Blower resistor ..... HA-54  
Board-on lift ..... GI-44  
Body alignment ..... BT-77  
Brake booster ..... BR-20  
Brake fluid change ..... BR-8  
Brake fluid level and line check ..... BR-8  
Brake hydraulic line ..... BR-10  
Brake master cylinder ..... BR-14  
Brake pedal ..... BR-12  
Bulb specifications ..... EL-574  
Bumper, front ..... BT-7  
Bumper, rear ..... BT-10

## ALPHABETICAL INDEX

### C

CHARGE - Wiring diagram ..... SC-27  
 CHIME - Wiring diagram ..... EL-199, 207  
 CIGAR - Wiring diagram ..... EL-236, 237  
 CKPS - Wiring diagram ..... EC-330, 485, 695  
 CMPS - Wiring diagram ..... EC-337  
 CONSULT for ABS ..... BR-65  
 CONSULT for engine ..... EC-83, 632  
 COOL/F - Wiring diagram ..... EC-409, 730  
 Camshaft inspection ..... EM-37, 123  
 Camshaft position sensor (CMPS) ..... EC-335  
 Camshaft position sensor (PHASE) ..... EC-335  
 Canister - See EVAP canister ..... EC-36  
 Charging system ..... SC-26  
 Cigarette lighter ..... EL-236  
 Circuit breaker ..... EL-38  
 Closed throttle position switch ..... EC-385, 520  
 Clutch cover ..... CL-22  
 Clutch disc ..... CL-22  
 Clutch master cylinder ..... CL-11  
 Clutch operating cylinder ..... CL-14  
 Clutch pedal ..... CL-10  
 Clutch release bearing ..... CL-17, 20  
 Clutch release mechanism ..... CL-17, 20  
 Clutch withdrawal lever ..... CL-17, 20  
 Coil spring (front) ..... SU-9  
 Coil spring (rear) ..... SU-21  
 Collision diagnosis ..... RS-85  
 Combination lamp, rear, removal and  
 installation ..... BT-47  
 Combination meter removal and instal-  
 lation - See Instrument panel ..... BT-25  
 Combination meter ..... EL-144  
 Combination switch ..... EL-56  
 Compression pressure ..... EM-83  
 Compressor clutch removal and  
 installation ..... HA-83  
 Compressor precaution ..... HA-5  
 Compressor special service tool ..... HA-9  
 Connecting rod bearing clearance ... EM-60, 151  
 Connecting rod bushing clearance ... EM-61, 153  
 Connecting rod ..... EM-57, 146  
 Console box - See Instrument panel ..... BT-25  
 Control lever (M/T) ..... MT-29  
 Control valve (A/T) ..... AT-388  
 Converter housing installation ..... AT-355  
 Coolant mixture ratio ..... MA-18  
 Cooling circuit (engine) ..... LC-12, 37  
 Cooling fan control system ..... LC-17, 43  
 Cooling fan control ..... EC-406, 730  
 Cooling fan motor ..... EC-417  
 Cooling fan relay ..... EC-416  
 Coupling sleeve (M/T) ..... MT-31, 55, 93  
 Crankcase emission control system -  
 See Positive crankcase ventilation ..... EC-39,  
 613  
 Crankcase ventilation system - See  
 Positive crankcase ventilation ..... EC-39, 613  
 Crankshaft position sensor (OBD) .. EC-328, 484

Crankshaft position sensor (POS) .. EC-328, 484  
 Crankshaft position sensor (TDC) ..... EC-695  
 Crankshaft ..... EM-59, 148  
 Cylinder block ..... EM-54, 140  
 Cylinder head ..... EM-34, 119

### D

DEF - Wiring diagram ..... EL-242, 250  
 DTC work support ..... EC-92  
 Data link connector for Consult ..... EC-40, 632  
 Daytime light system ..... EL-67  
 Detonation sensor - See Knock  
 sensor ..... EC-324  
 Diagnosis sensor unit ..... RS-26  
 Diagnostic trouble code (DTC) for  
 OBD system ..... EC-10, 72, 596, 627  
 Diagnostic trouble code (DTC) inspec-  
 tion priority chart ..... EC-153  
 Differential gear (FF A/T) ..... AT-442  
 Differential gear (FF M/T) ..... MT-31, 44, 55, 93,  
 107  
 Dimensions ..... GI-43  
 Dome light - See Interior lamp ..... EL-115  
 Door glass ..... BT-17  
 Door lock ..... BT-21  
 Door mirror ..... BT-75  
 Door trim ..... BT-39  
 Door, front ..... BT-16  
 Door, rear ..... BT-16  
 Drive plate runout ..... EM-62  
 Drive shaft (front) ..... AX-10  
 Dropping resistor (A/T) ..... AT-182, 245  
 Dual pressure switch ..... HA-13

### E

ECCS-D control module ..... EC-659, 714, 792,  
 794, 799, 801  
 ECM input/output signal ..... EC-164, 659  
 ECTS - Wiring diagram ..... EC-203, 680  
 EGR control valve ..... EC-432  
 EGR temperature sensor ..... EC-418  
 EGR volume control valve ..... EC-815  
 EGR/TS - Wiring diagram ..... EC-421  
 EGRC1 - Wiring diagram ..... EC-347, 429, 494,  
 817  
 EVAP canister purge volume control  
 solenoid valve ..... EC-37  
 EVAP canister purge volume control  
 valve ..... EC-364, 503  
 EVAP canister ..... EC-37  
 Electric sunroof ..... EL-292  
 Electrical diagnoses ..... GI-21  
 Electrical ignition system ..... EC-34  
 Electrical load signal circuit ..... EC-578  
 Electrical unit ..... EL-581  
 Electrical units location ..... EL-517

## ALPHABETICAL INDEX

Electronic fuel injection pump ..... EC-618, 716,  
723, 757, 764, 771, 778, 785, 803  
Engine compartment ..... BT-78  
Engine control circuit diagram ..... EC-25, 606  
Engine control component parts  
location ..... EC-21, 603  
Engine control module (ECM) ..... EC-391, 659,  
714, 792, 794, 799, 801  
Engine control system diagram and  
chart ..... EC-29, 608  
Engine coolant temperature sensor  
(ECTS) ..... EC-201, 680  
Engine fail-safe system ..... EC-154  
Engine oil precautions ..... GI-7  
Engine outer component parts ..... EM-11  
Engine removal ..... EM-51, 137  
Engine room - See Engine  
compartment ..... BT-78  
Engine serial number ..... GI-41  
Evaporative emission (EVAP)  
system ..... EC-36  
Exhaust gas recirculation (EGR)  
valve ..... EC-343, 425, 491  
Exhaust system ..... FE-15, 32  
Exterior ..... BT-47

### F

F/PUMP - Wiring diagram ..... EC-563  
FR02 - Wiring diagram ... EC-219, 239, 247, 451  
FR02/H - Wiring diagram ..... EC-254, 458  
FUEL - Wiring diagram ..... EC-299, 307  
Fan switch ..... HA-54  
Final drive (FF A/T) ..... AT-442  
Final drive (FF M/T) ..... MT-44, 77, 93, 107  
Finisher, interior - See Trim ..... BT-31  
Finisher, trunk lid ..... BT-45  
Floor trim ..... BT-31  
Fluid temperature sensor (A/T) ..... AT-194  
Fluids ..... MA-16  
Flywheel (clutch) ..... CL-22  
Flywheel runout ..... EM-62, 154  
Fog lamp, front, removal and  
installation ..... BT-7  
Fog lamp, front ..... EL-89  
Fork rod (M/T) ..... MT-32, 56, 94  
Forward clutch ..... AT-412  
Freeze frame data ..... EC-61, 72  
Front axle ..... AX-2  
Front bumper ..... BT-7  
Front combination lamp removal and  
installation ..... BT-7  
Front disc brake ..... BR-27  
Front door ..... BT-16  
Front fog lamp removal and  
installation ..... BT-7  
Front fog lamp ..... EL-89  
Front heated oxygen sensor (HO2S)  
heater ..... EC-252, 457

Front heated oxygen sensor (HO2S) ..... EC-216,  
224, 230, 236, 245, 450  
Front seat belt ..... RS-5  
Front seat ..... BT-56  
Front suspension ..... SU-2  
Front washer ..... EL-215  
Front wiper ..... EL-215  
Fuel cut control (at no load & high  
engine speed) ..... EC-36, 612  
Fuel gauge ..... EL-144  
Fuel injection system ..... EC-297, 305, 610  
Fuel injector ..... EC-541  
Fuel precautions ..... GI-8  
Fuel pressure check ..... EC-40  
Fuel pressure regulator ..... EC-41  
Fuel pressure release ..... EC-40  
Fuel pump relay ..... EC-561  
Fuel pump ..... EC-561  
Fuel system ..... FE-5, 20  
Fuel tank vacuum relief valve ..... EC-37  
Fuse block ..... EL-577  
Fuse ..... EL-38  
Fusible link ..... EL-38

### G

GLOW - Wiring diagram ..... EC-806  
Garage jack and safety stand ..... GI-45  
Gauges ..... EL-144  
Gear components (M/T) ..... MT-31, 55, 93  
Generator - See Alternator ..... SC-31  
Generic scan tool (GST) ..... EC-94  
Glass ..... BT-17  
Glow plug ..... EC-806  
Glow relay ..... EC-806  
Grease ..... MA-16  
Ground distribution ..... EL-39

### H

H/LAMP - Wiring diagram ..... EL-60, 61  
HEATER - Wiring diagram ..... HA-24  
HFC134a (R134a) system  
precaution ..... HA-2  
HFC134a (R134a) system service  
procedure ..... HA-78  
HFC134a (R134a) system service  
tools ..... HA-11  
HFC134a system service equipment  
precaution ..... HA-6  
HORN - Wiring diagram ..... EL-234, 235  
HSEAT - Wiring diagram ..... EL-288, 290  
Harness connector ..... EL-6  
Harness layout ..... EL-522  
Hazard warning lamp ..... EL-96  
Headlamp removal and installation ..... BT-7  
Headlamp washer ..... EL-231  
Headlamp ..... EL-60

## ALPHABETICAL INDEX

Headlining - See Roof trim ..... BT-43  
 Heated oxygen sensor (HO2S)  
     (front) ..... EC-216, 224, 230, 236, 245, 450  
 Heated oxygen sensor (HO2S) heater  
     (front) ..... EC-252, 457  
 Heated oxygen sensor (HO2S) heater  
     (rear) ..... EC-291, 469  
 Heated oxygen sensor (rear) ..... EC-258, 267,  
     275, 284, 462  
 Heated seat ..... EL-288  
 Height (Dimensions) ..... GI-43  
 High clutch ..... AT-407  
 Hood ..... BT-7  
 Horn ..... EL-234  
 How to erase DTC for OBD system .. EC-70, 73,  
     627

### I

IACV-AAC valve ..... EC-376, 511  
 IATS - Wiring diagram ..... EC-196, 444  
 IGN/SG - Wiring diagram ..... EC-548  
 ILL - Wiring diagram ..... EL-112  
 INJECT - Wiring diagram ..... EC-542  
 INT/L - Wiring diagram ..... EL-141, 143  
 IVC - Wiring diagram ..... EC-395, 527  
 Identification plate ..... GI-40  
 Idle air control (IAC) system ..... EC-376, 511  
 Idle air control valve (IACV) ..... EC-376, 511  
 Idle speed ..... EC-43, 641  
 Ignition timing ..... EC-43  
 Illumination ..... EL-108  
 Injection nozzle ..... EC-614  
 Injector removal and installation ..... EC-41  
 Input shaft (FF M/T) ..... MT-36, 64, 93, 98  
 Instrument panel ..... BT-25  
 Intake air temperature sensor ..... EC-194, 442  
 Intake valve timing control solenoid  
     valve ..... EC-393, 526  
 Interior lamp on-off control ..... EL-116, 128  
 Interior lamp ..... EL-115  
 Interior ..... BT-31

### J

Jacking points ..... GI-45  
 Joint connector (J/C) ..... EL-583  
 Junction box (J/B) ..... EL-577

### K

Keyless entry system - See Multi-remote control  
 system ..... EL-392  
 Knock sensor (KS) ..... EC-324, 325  
 Knuckle spindle ..... AX-5

### L

LOAD - Wiring diagram ..... EC-579  
 Length (Dimensions) ..... GI-43  
 License lamp ..... EL-81  
 Lifting points ..... GI-46  
 Line pressure solenoid valve ..... AT-232  
 Line pressure test (A/T) ..... AT-84  
 Liquid gasket application ..... EM-4, 77  
 Location of electrical units ..... EL-517  
 Lock, door ..... BT-21  
 Low and reverse brake ..... AT-419  
 Lubricant (R134a) A/C ..... HA-80  
 Lubricants ..... MA-16  
 Lubrication circuit (engine) ..... LC-4, 27

### M

M/T major overhaul ..... MT-30, 54, 92  
 M/T removal and installation ..... MT-23  
 MAFS - Wiring diagram ..... EC-189, 673  
 MAIN - Wiring diagram ..... EC-178, 666  
 MAJOR OVERHALL ..... AT-357  
 METER - Wiring diagram ..... EL-151  
 MIL & Data link connectors circuit ..... EC-591  
 MIL/DL - Wiring diagram ..... EC-591, 831  
 MIRROR - Wiring diagram ..... EL-294, 295  
 Magnet clutch ..... HA-83  
 Mainshaft (M/T) ..... MT-39, 69, 93, 103  
 Malfunction indicator lamp (MIL) ..... EC-74, 628  
 Manual air conditioner - Wiring  
     diagram ..... HA-27  
 Manual transaxle number ..... GI-42  
 Mass air flow sensor (MAFS) ..... EC-187, 673  
 Master cylinder (brake) ..... BR-14  
 Master cylinder (clutch) ..... CL-11  
 Meter ..... EL-144  
 Mirror defogger ..... EL-240  
 Mirror, door ..... BT-75  
 Misfire ..... EC-318  
 Mode door control linkage  
     adjustment ..... HA-41  
 Model variation ..... GI-38  
 Molding - See Exterior ..... BT-47  
 Multi-remote control system ..... EL-392  
 Multiport fuel injection (MFI) system ..... EC-32  
 Multiport fuel injection precautions ..... GI-6

### N

NATS (Nissan Anti-theft System)  
 precautions ..... GI-3  
 NATS (Nissan Anti-theft System) ..... EL-422  
 NATS - Wiring diagram ..... EL-425, 427  
 NVH troubleshooting (AX) ..... AX-3  
 NVH troubleshooting (BR) ..... BR-7  
 NVH troubleshooting (MT) ..... MT-13  
 NVH troubleshooting (ST) ..... ST-5



## ALPHABETICAL INDEX

NVH troubleshooting (SU) ..... SU-16  
 NVH troubleshooting (CL) ..... CL-4  
 NVIS (Nissan vehicle immobiliser system) precautions ..... GI-3  
 Neutral position switch ..... EC-437, 536

### O

Oil pan (engine) ..... EM-20, 89  
 Oil pressure (engine) ..... LC-5, 28  
 Oil pump (A/T) ..... AT-384  
 Oil pump (engine) ..... LC-5, 28  
 Oil pump regulator valve (engine) ..... LC-8, 30  
 Oil seal replacement (engine) ..... EM-32  
 On board diagnostic system ..... EC-59, 627  
 Operating cylinder (clutch) ..... CL-14  
 Overdrive control switch ..... AT-341  
 Overrun clutch ..... AT-412

### P

P/ANT - Wiring diagram ..... EL-282  
 PCV (positive crankcase ventilation) ..... EC-39, 613  
 PGC/V - Wiring diagram ..... EC-366, 505  
 PNP/SW - Wiring diagram ..... EC-439, 537, 826  
 POWER - Wiring diagram ..... EL-11, 28  
 PST/SW - Wiring diagram ..... EC-568  
 Park/Neutral position switch ... EC-437, 536, 826  
 Park/neutral position switch (A/T) ..... AT-183  
 Park/neutral position switch (M/T) ..... MT-21  
 Parking brake control ..... BR-47  
 Parking lamp ..... EL-81  
 Piston assembly ..... EM-62, 155  
 Piston pin inspection ..... EM-56, 145  
 Piston ring inspection ..... EM-56, 145  
 Piston to bore clearance ..... EM-58, 147  
 Power antenna ..... EL-282  
 Power door lock ..... EL-314  
 Power door mirror ..... EL-294  
 Power steering fluid level ..... ST-7  
 Power steering gear ..... ST-16  
 Power steering hydraulic pressure ..... ST-9  
 Power steering oil pressure switch ..... EC-567  
 Power steering oil pump ..... ST-25  
 Power steering system bleeding ..... ST-8  
 Power supply routing ..... EL-10  
 Power window ..... EL-298  
 Precautions (General) ..... GI-4  
 Pressure plate - See Clutch cover ..... CL-22  
 Priming pump ..... EC-625, 641

### Q

Quick-glow system ..... EC-806

### R

RR02 - Wiring diagram ..... EC-261, 270, 278, 286, 463  
 RR02/H - Wiring diagram ..... EC-293, 470  
 Radiator ..... LC-16, 42  
 Radio - See Audio ..... EL-258  
 Rear air spoiler ..... BT-47  
 Rear axle (disc brake type) ..... AX-24  
 Rear axle ..... AX-22  
 Rear bumper ..... BT-10  
 Rear combination lamp removal and installation ..... BT-47  
 Rear disc brake ..... BR-35, 43  
 Rear door ..... BT-16  
 Rear drum brake ..... BR-31  
 Rear heated oxygen sensor (HO2S) heater ..... EC-291, 469  
 Rear heated oxygen sensor (HO2S) ..... EC-258, 267, 275, 284, 462  
 Rear seat belt ..... RS-11  
 Rear seat ..... BT-60  
 Rear suspension ..... SU-16  
 Rear window defogger ..... EL-240  
 Rear window ..... BT-71  
 Refrigerant connection precaution ..... HA-3  
 Refrigerant general precaution ..... HA-2  
 Refrigerant lines ..... HA-91  
 Refrigeration cycle ..... HA-13  
 Release bearing (clutch) ..... CL-17, 20  
 Removal and installation (A/T) ..... AT-354  
 Reverse clutch ..... AT-403  
 Reverse idler shaft (M/T) ..... MT-30, 54, 93  
 Reverse lamp switch (M/T) - See Back-up lamp switch (M/T) ..... MT-21  
 Reverse main gear (M/T) ..... MT-31, 55, 93  
 Road wheel size ..... GI-43  
 Roof trim ..... BT-43  
 Room lamp - See Interior lamp ..... EL-115

### S

S/LOCK - Wiring diagram ..... EL-318, 335, 352, 372  
 S/SIG - Wiring diagram ..... EC-558  
 SAE J1930 terminology list ..... GI-50  
 SHIFT - Wiring diagram ..... AT-344  
 SROOF - Wiring diagram ..... EL-292  
 SRS - See Supplemental Restraint System ..... RS-20  
 START - Wiring diagram ..... SC-14  
 STOP/L - Wiring diagram ..... EL-85, 86  
 SWL/V - Wiring diagram ..... EC-399, 475  
 Seal - See Exterior ..... BT-47  
 Seat belt pre-tensioner disposal ..... RS-40  
 Seat belt pre-tensioner ..... RS-3  
 Seat belt, front ..... RS-5  
 Seat belt, rear ..... RS-11  
 Seat, front ..... BT-56

## ALPHABETICAL INDEX

Seat, rear ..... BT-60  
 Self-diagnostic results ..... EC-74, 628  
 Shift control components (M/T) .... MT-32, 56, 94  
 Shift fork (M/T) ..... MT-32, 56, 94  
 Shift lever ..... MT-29  
 Shift lock system ..... AT-343  
 Shift schedule ..... AT-470  
 Shift solenoid valve A (A/T) .... AT-204, 209, 222  
 Shift solenoid valve B (A/T) ..... AT-204, 209  
 Shock absorber (front) ..... SU-10  
 Shock absorber (rear) ..... SU-21  
 Side air bag ..... RS-36, 38  
 Side trim ..... BT-31  
 Spare tire size ..... GI-43  
 Speedometer ..... EL-144  
 Spiral cable ..... RS-29  
 Spot lamp ..... EL-141  
 Spring (Wheelarch) height ..... SU-6  
 Stabilizer bar (front) ..... SU-11  
 Stall test (A/T) ..... AT-80  
 Standardized relay ..... EL-8  
 Start signal ..... EC-557, 823  
 Starter ..... SC-18  
 Starting system ..... SC-13  
 Steering linkage ..... ST-16  
 Steering switch ..... EL-59  
 Steering wheel and column ..... ST-11  
 Steering wheel play ..... ST-6  
 Steering wheel turning force ..... ST-8  
 Stop lamp ..... EL-85  
 Striking rod (M/T) ..... MT-32, 56, 94  
 Strut (front) ..... SU-9  
 Strut (rear) ..... SU-20  
 Sub-gear (M/T) ..... MT-31, 55  
 Sunroof, electric ..... EL-292  
 Sunroof ..... BT-63  
 Super lock ..... EL-349  
 Supplemental Restraint System ..... RS-20  
 Supplemental restraint system - Wiring diagram ..... RS-53  
 Swirl control valve control solenoid valve ..... EC-399, 475  
 Symbols and abbreviations ..... GI-10  
 Symptom matrix chart ..... EC-155, 646  
 Synchronizer (M/T) ..... MT-31, 55, 93  
 System readiness test (SRT) code ..... EC-62

### T

TCM circuit diagram ..... AT-17  
 TCM inspection table ..... AT-119  
 TFTS - Wiring diagram ..... EC-315  
 TP/SW - Wiring diagram ..... EC-387, 521  
 TPS - Wiring diagram ..... EC-210  
 TURN - Wiring diagram ..... EL-103  
 Tachometer ..... EL-144  
 Tail lamp ..... EL-81  
 Tank fuel temperature sensor ..... EC-313  
 Thermostat ..... LC-15, 41

Three way catalyst precautions ..... GI-6  
 Three way catalyst ..... EC-359  
 Throttle position sensor (TPS) ..... EC-207  
 Throttle position sensor adjustment ..... EC-100, 128  
 Throttle position switch ..... AT-141, 267, 341, EC-385, 520  
 Throwout bearing - See Clutch release bearing ..... CL-17, 20  
 Tie-rod ball joints ..... ST-20  
 Tie-rod ..... ST-16  
 Tightening torque of standard bolts ..... GI-49  
 Timing chain ..... EM-23, 94  
 Tire size ..... GI-43  
 Torque converter installation ..... AT-355  
 Tow truck towing ..... GI-47  
 Transmission case (M/T) ..... MT-30, 54, 92  
 Tread-FR&RR (Dimensions) ..... GI-43  
 Trim ..... BT-31  
 Trouble diagnoses ..... GI-31  
 Trunk lid finisher ..... BT-45  
 Trunk lid opener - See Trunk lid ..... BT-10  
 Trunk lid trim ..... BT-45  
 Trunk lid ..... BT-10  
 Trunk room lamp ..... EL-141  
 Trunk room trim ..... BT-45  
 Turn signal lamp ..... EL-96  
 Two trip detection logic ..... EC-59  
 Two-pole lift ..... GI-46

### u

Under body ..... BT-80

### v

VSS - Wiring diagram ..... EC-372, 701  
 Vacuum hose (brake system) ..... BR-22  
 Vacuum hose drawing (Engine control) .... EC-30  
 Vacuum pump ..... BR-23  
 Valve clearance ..... EM-44, 133  
 Valve guide ..... EM-39, 124  
 Valve lifter ..... EM-43  
 Valve seat ..... EM-41, 126  
 Valve spring ..... EM-42, 128  
 Vehicle speed sensor (VSS) ..... EC-370, 701  
 Viscosity number (SAE) ..... MA-17  
 Viscous coupling (FF M/T) ..... MT-93

### w

WARN - Wiring diagram ..... EL-190  
 WIP/R - Wiring diagram ..... EL-225, 227  
 WIPER - Wiring diagram ..... EL-217, 220  
 Warning chime ..... EL-197  
 Warning lamps ..... EL-184  
 Washer, front ..... EL-215

## ALPHABETICAL INDEX

---

Water pump .....	LC-14, 39	switch .....	EC-207
Water temperature gauge .....	EL-144	Width (Dimensions) .....	GI-43
Weatherstrip - See Exterior .....	BT-47	Window, rear .....	BT-71
Wheel alignment (rear) .....	SU-18	Windshield .....	BT-71
Wheel bearing (front) .....	AX-3	Wiper, front .....	EL-215
Wheel bearing (rear) .....	AX-23	Wiring diagram (cell code) list .....	EL-575
Wheel hub (front) .....	AX-5	Wiring diagrams .....	GI-11
Wheel hub (rear) .....	AX-24	Withdrawal lever (clutch) .....	CL-17, 20
Wheel sensors (ABS) .....	BR-97	Wrist pin -	
Wheelarch height .....	SU-6	See Piston pin inspection .....	EM-56, 145
Wheelbase (Dimensions) .....	GI-43		
Wide open & closed throttle position			